



PowerShot G7 X Mark II LCD Screen Replacement

This guide will show you how to replace the rear LCD screen of the PowerShot G7 X Mark II camera.

Written By: Brandon



INTRODUCTION

This guide will show how to replace the LCD screen on the camera. This replacement is useful if the LCD screen has been cracked or has stopped working.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Heavy-Duty Spudger](#) (1)
-

Step 1 — LCD Screen



- Use a Philips #000 screwdriver to remove the three 2mm screws on the bottom of the LCD screen.

Step 2



- Tilt the LCD screen up to reveal the back of it.
- Remove three 4mm Phillips #000 screws from the back of the LCD screen.

Step 3



- Remove Back panel from LCD screen.
- Use a spudger tool to release ribbon cable from the ZIF connector.
- ⚠ The cable is thin and delicate. Detach with care.

Step 4



- The screen is detached and can now be replaced.

To reassemble your device, follow these instructions in reverse order.